

27WON

CV2-3-020 Accord Front Strut Tower Bar

10th Gen Accord Front Strut Tower Bar

Written By: Josh Rivas



INTRODUCTION

In this installation guide we have provided step by step instructions to install the 27WON Performance Front Strut Tower Bar.

Advisory:

- The engine bay will be hot after recent vehicle operation. Allow the vehicle to cool or use a fan to cool the engine bay before working on the vehicle.



TOOLS:

- [3/8" Ratchet](#) (1)
- [14mm Socket - Deep](#) (1)
- [3/8" Torque Wrench](#) (1)



PARTS:



- [Front Strut Tower Bar](#) (1)

Step 1 — Getting Started




- First and foremost; **THANK YOU** for becoming a part of the 27WON Family. We hope to **REDEFINE** your experience of the aftermarket with the highest level Parts, Customer Service, Packaging, & Support
- These instructions were written with a 2020 Honda Accord

Step 2 — Locate Strut Tower Tops

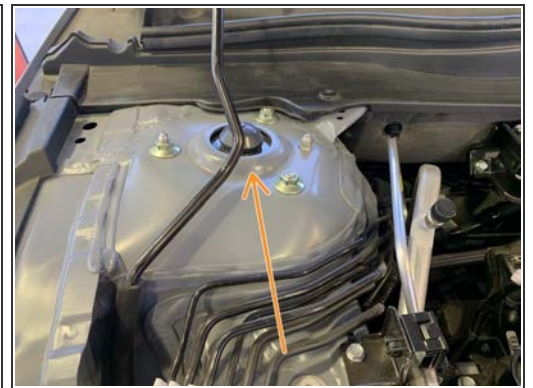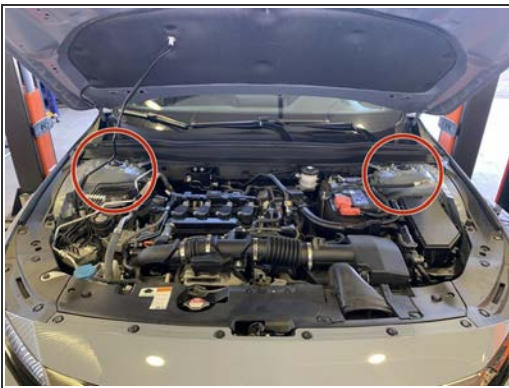

- Locate the strut tower tops in the engine bay
- Shown are the passenger and driver side strut tower tops

Step 3 — Remove Strut Hardware

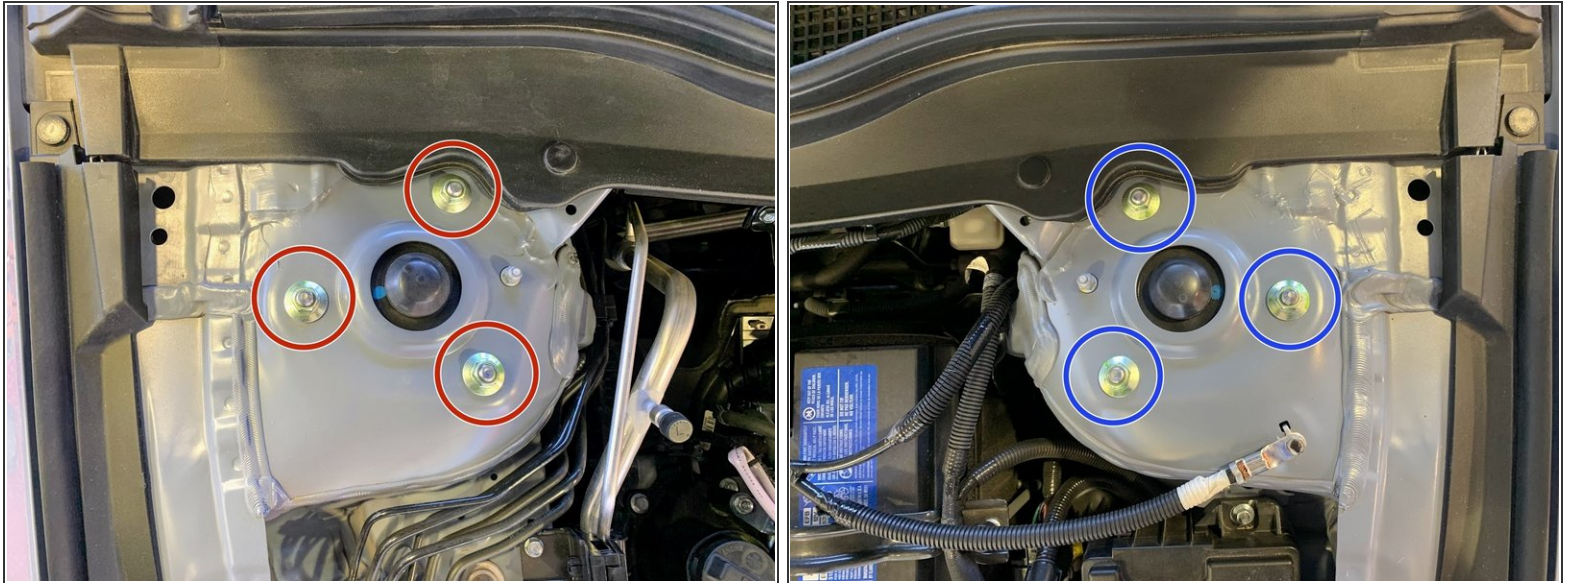

⚠ If you have an aftermarket suspension that could move when undone, be sure to note where it is located prior to the removal of the hardware. Failure to do so could change the alignment of your vehicle when reinstalling the strut hardware



- Remove three (3) flange nuts with a 14mm deep socket and ratchet wrench from the passenger side
- Remove three (3) flange nuts with a 14mm deep socket and ratchet wrench from the driver side
- Clean any debris from the strut top surfaces

Step 4 — Place 27WON Strut Bar on Strut Tower




- Orientate the strut bar as shown
- Place each end of the strut bar down on the strut tops over the studs

Step 5 — Verify Battery Cable and Hose Clearance

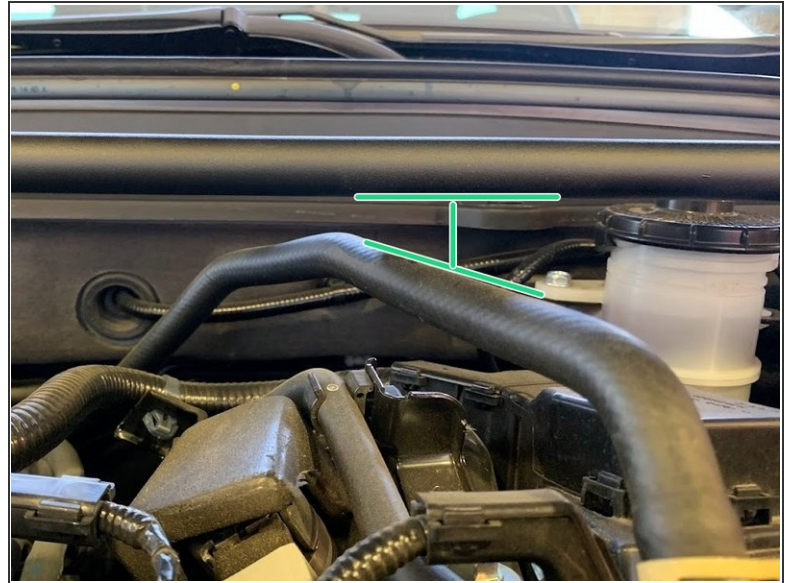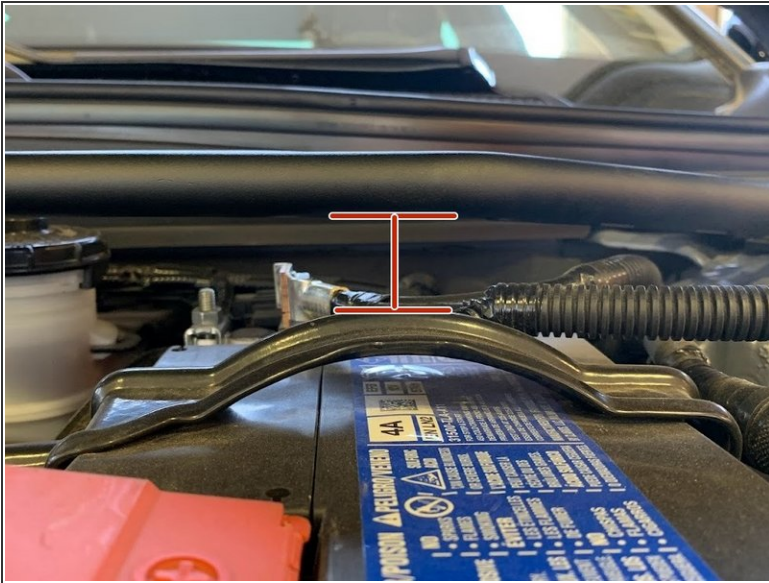


- ① The strut bar sits close to the battery and cables, please verify the cables are not pushing up into the strut bar
 - If the cables are pushing into the strut bar, adjust the cables by flexing them toward the front of the car a bit to create clearance
- ① The battery cables are insulated and protected by a plastic jacket but minimizing contact with the bar is preferred
 - The strut bar sits close to the hose as shown, please verify the hose is not pushing up into the strut bar

Step 6 — Fasten Passenger Side of Strut Bar

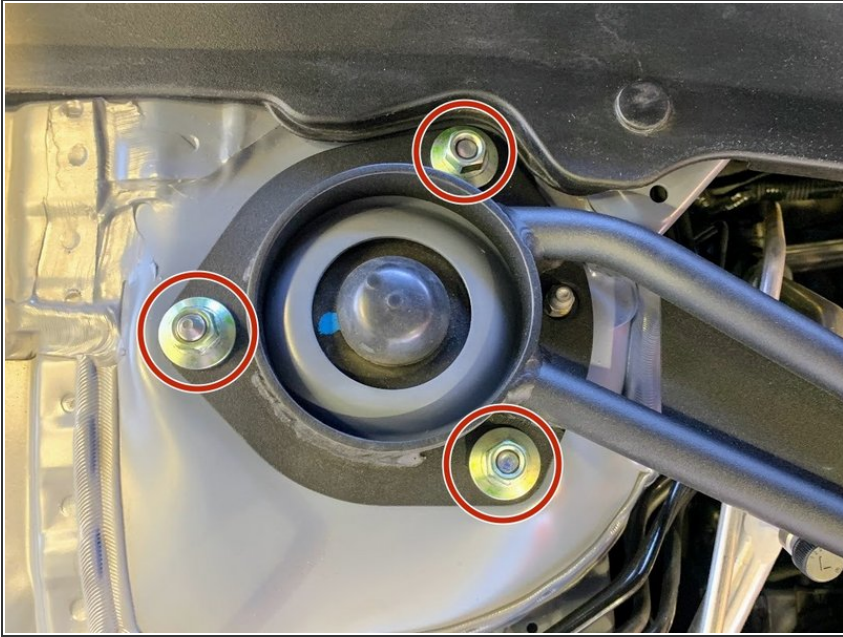

- Install the three (3) OEM flange nuts
- Using a torque wrench and 14mm socket, **torque each nut to 45-47 lb-ft**

Step 7 — Fasten Driver Side of Strut Bar

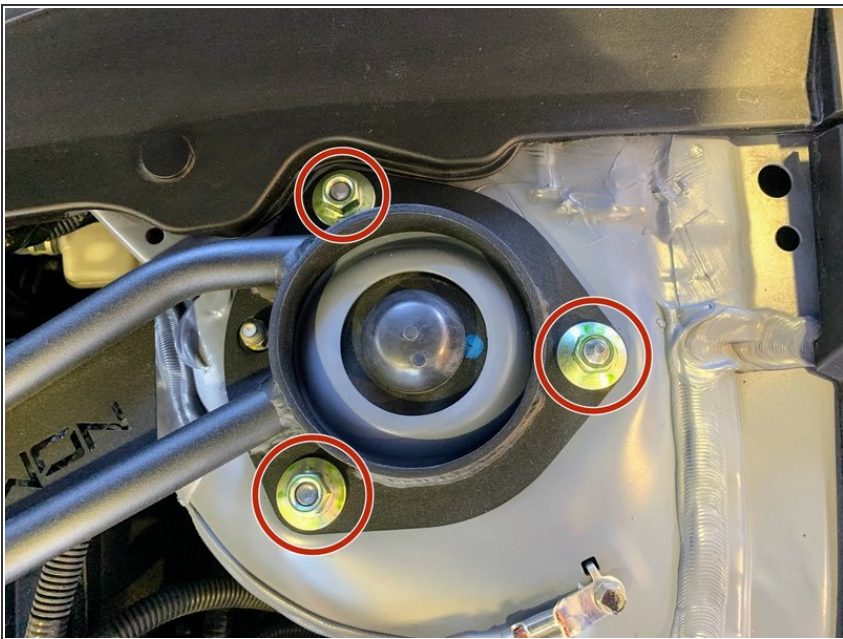

- Install the three (3) OEM flange nuts
- Using a torque wrench and 14mm socket, **torque each nut to 45-47 lb-ft**

Step 8 — I Dare You to REDEFINE



- This completes the installation of your 27WON Performance Front Strut Tower Bar
- We hope you were impressed with your 27WON experience and love your new Front Strut Tower Bar for years to come. Email us at sales@27won.com or call us at 571-271-0271 with any questions or concerns
- Please leave a review here: <https://store.27won.com/10th-gen-accord-...>
- Stay Connected with the latest developments with the 27WON Monthly Newsletter: <https://store.27won.com/27won-newsletter...>
- See the latest Products and Tech Videos from 27WON with a quick Subscribe: <https://www.youtube.com/27won>
- Share your experience using #27WON on Instagram and Facebook