27W-8-310 Fender Shrouds 11th Gen Civic

Install instructions for the 27WON fender shrouds for the 2022+ Honda Civic USDM

Written By: Vincent Melon

© 2025

INTRODUCTION

In this installation guide, we have provided step-by-step instructions to install the left and right-hand side 27WON Performance Fender Shrouds.

Advisory:

- Fitment is only confirmed for USDM and the Left-hand drive version of the 2022+ Honda Civic. Fitment not confirmed for Right-hand drive models

TOOLS:

- 3/8" Ratchet (1)
- 8mm Socket (1)
- 10mm Socket (1)
- Rivet Nut Tool (1)
- Handheld Drill (1)
- 7mm or 9/32" Drill Bit (1)

PARTS:

- 11th Gen Civic- Passenger Side Fender Shroud (1)
- 11th Gen Civic- Driver Side Fender Shroud (1)
- M5x0.8x30mm Flanged Bolt (2)
- M5x0.8x40mm Flanged Bolt (1)
- M5x0.8x12mm SS Riv Nut (3)
- M5 Flat Washers (3)

© 2025

Step 1 — Getting Started

- First and foremost; **THANK YOU** for becoming a part of the 27WON Family. We hope to **REDEFINE** your experience of the aftermarket with the highest level Parts, Customer Service, Packaging, & Support

⚠ Install requires drilling a small hole in the driver side fender inside the engine bay

⚠ These do not fit 2023+ Integra

Step 2 — Riv Nut Tool Required

ⓘ These instructions are written using a readily available riv rut install tool. The following steps require a tool like this. A similar style riv nut tool will suffice

ⓘ This riv nut tool can be had for on around $40 from places like Amazon or your local hardware store. Be sure to have an M5 size adapter in your kit

- Riv Nuts are supplied with the Fender Shroud set

© 2025

Step 3 — Identify Work Space

- Open the hood to access both the driver and passenger side fender shroud areas
- Start on the driver-side fender shroud first

Step 4 — Install Riv Nut Into Fender

- Locate existing small hole on driver-side fender as shown with red circle. Place supplied Riv Nut in hole with red circle
- Use Riv Nut tool to install M5 Riv Nut
- Riv Nut successfully installed. It is confirmed installed correctly when the riv nut is snug in place and will not pull back out from the hole

© 2025

Step 5 — Remove Driver Side Fender Hardware

- Use 3/8" ratchet and 10mm socket to remove the two (2) 10mm bolts

© 2025

Step 6 — Add Hole In Driver Side Fender For Riv-Nut

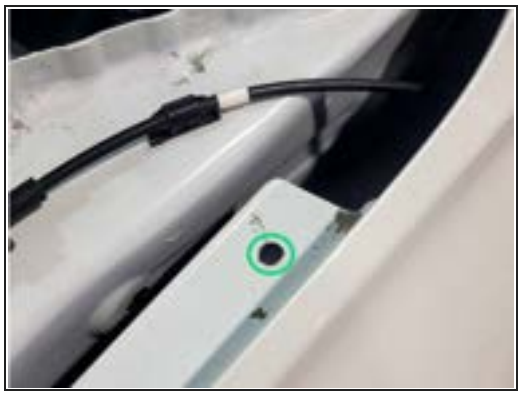

- Place shroud into position. Make sure to line up the other three mounting holes. You can secure mount in place with finger tight hardware if you like
- Use a punch, marker, or even a screw driver and mallet to mark a spot on the fender to add a hole
- Remove shroud
- Using a drill and a 7mm or 9/32" bit, make a hole in the previously marked location
- Use Riv Nut tool to install M5 Riv Nut
  - ⓘ Riv Nut successfully installed. It is confirmed installed correctly when the riv nut is snug in place and will not pull back out from the hole

© 2025

Step 7 — Install Driver Side Shroud

- Place Shroud as Shown
- Line up holes on bottom of shroud with the two bolts removed in the last step
- ⓘ **"torque to snug"** is defined as 1/4 to 1/2 more rotation after setting resistance is felt
- Install 30mm long SS bolt and small washer into Riv-Nut using a 8mm socket or wrench. Torque to snug
- Reinstall both OE bolts using a 10mm socket or wrench and torque to snug
- Install 40mm long SS bolt and small washer into Riv-Nut using a 8mm socket or wrench. Torque to snug

© 2025

Step 8 — Locate Passenger Side Fender Area

- Locate Passenger side (RH) fender area

Step 9 — Install Riv Nut to Passenger Side Fender

- Locate existing small hole on driver-side fender as shown in red circle
- Use Riv Nut tool to install M5 riv nut
- Riv Nut successfully installed. It is confirmed installed correctly when the riv nut is snug in place and will not pull back out from the hole

This document was generated on 2025-07-15 01:57:09 PM (MST).

Step 10 — Remove Passenger Side Fender Hardware

- Use 3/8" ratchet and 10mm socket to remove the two 10mm bolts
- Disconnect the windshield washer hose by pulling the halves apart

Step 11 — Install Passenger Shroud

- Place passenger side shroud as shown
- Line up holes on the bottom of the shroud with the two bolts removed in the last step
- Install supplied 8mm SS bolt and small washer and torque to snug
- Reinstall both 10mm bolt and torque to snug
- Put two windshield washer hose halves back together

© 2025

Step 12 — I Dare You to REDEFINE

- This completes the installation of your 27WON Performance Fender Shrouds
- We hope you were impressed with your 27WON experience and love your new shrouds for years to come. Email us at sales@27won.com or call us at 571-271-0271 with any questions or concerns
- Please Leave a review here: https://store.27won.com/11th-gen-honda-c...
- Share your experience using #27WON on Instagram and Facebook

© 2025